

Preventive Maintenance

KE640 Espresso Grinder



1. Cleaning:

- Always unplug the coffee grinder before cleaning.
- Apply dry cleaning only. If necessary use suitable mild „dish“ washer detergent.
- No alkaline cleaning agent must be used for cleaning (affects flavour).
- Do not spray coffee grinder with water and/or steam (risk of short circuit).
- Clean your grinder periodically, at least once a week.
- Please use DITTING GRINDZ™

Cleaning of housing:

- Use paper towel along with mild dish washer detergent to clean the housing, cover lid and inside the hopper.
- Use a vacuum cleaner to exhaust the discharge tube. The use of brushes can lead to the damage of the built-in flappers resulting in an inaccurate grinding result.

Periodic checks of the grinder, grinding discs and grinding quality must only be performed by competent service personnel and/or trained staff.

2. Routine Check:

Indications:

- Reduction of the output of the grinder
- Temperature increase of the ground coffee
- Inconsistent grind
- Increased amount of dust
- Grinder clogs more often

3. Maintenance:

Short-term maintenance every 2 weeks

- Outside cleaning including the hopper
- Use DITTING GRINDZ™

Long-term maintenance once a year

- Thorough cleaning of the grinder including opening of the grinder housing and removing of all coffee residues
- Change grinding discs
- Check calibration and re-calibrate, if necessary

4. Spare part proposal for KE640/ KE640 VARIO

1 x bean hopper	309559
1 x power board	101655
1 x capacitor	305743
1 x residue tray	306340
1 x grinder casing set	101145
1 x processor board	308389
1 x display K30	307244
1 x small parts set	308387
1 x micro switch	306720
5 x silicone flapper 17 mm	310139
5 x silicone flapper 15,8mm	101518
2 x set of grinding discs	306715
1 x burr changing tool	101066